



2-3. Operating the lights and windshield wipers

Headlight switch

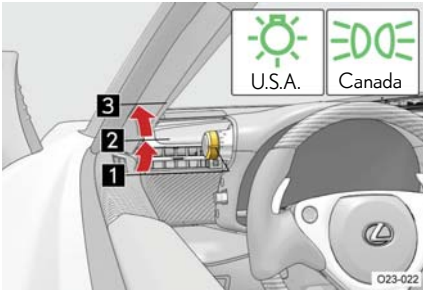

- 1 ○ Off
Canada only:
The daytime running lights turn on.
- 2 ≡ The side marker, parking, tail, license plate and instrument panel lights turn on.
Canada only:
The daytime running lights and all lights listed above turn on.
- 3 ≡ The headlights and all lights listed above turn on.

Turning on the high beam headlights

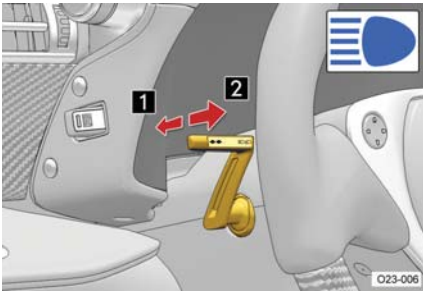


- 1 With the headlights on, push the lever forward to turn on the high beams.
Pull the lever rearward to the center position to turn the high beams off.
- 2 Pull the lever rearward and release it to flash the high beams once.
You can flash the high beams with the headlights on or off.




n Daytime running light system (Canada only)

To make your vehicle more visible to other drivers, the headlights and tail lights turn on automatically whenever the engine is started and the parking brake is released.

n Automatic light off system

1 When the headlights come on: The headlights and tail lights turn off 30 seconds after a door is opened and closed if the ignition switch is turned to the "ACC" or "LOCK" position. (The light turns off immediately if  on the key is pressed after both side doors are locked.)

1 When only the tail lights come on: The tail lights turn off automatically if the ignition switch is turned to the "ACC" or "LOCK" position and the driver's door is opened.

To turn the lights on again, turn the ignition switch to the "ON" position, or turn the light switch to  once and then back to  or .



NOTICE


n To prevent battery discharge

Do not leave the lights on longer than necessary when the engine is not running.


2-3. Operating the lights and windshield wipers

Windshield wipers and washer


The wiper operation is selected by moving the lever as follows.

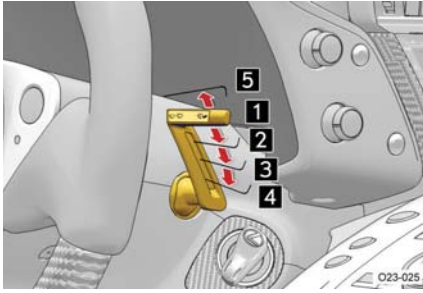

- 1 Off
- 2 Intermittent windshield wiper operation
- 3 Low speed windshield wiper operation
- 4 High speed windshield wiper operation
- 5 Temporary operation

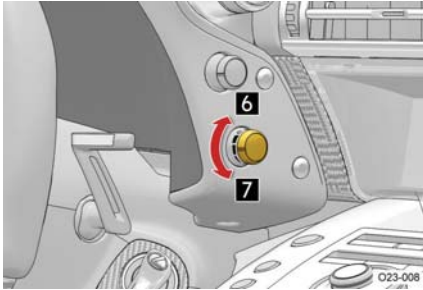

- 6 Increases the intermittent windshield wiper frequency
- 7 Decreases the intermittent windshield wiper frequency

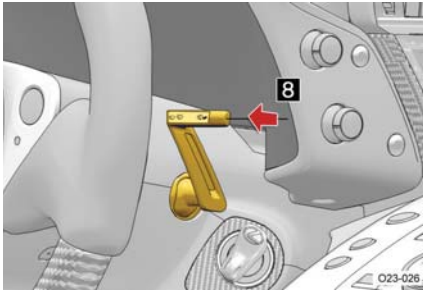

- 8 Washer/wiper dual operation

The wipers operate automatically. (After operating several times, the wipers operate one more time after a short delay to prevent dripping.)

With the headlight cleaners:
If the headlights are on, the headlight cleaners will operate once.

n The windshield wipers and washer can be operated when

The ignition switch is in the "ON" position.

n Effects of vehicle speed on wiper operation

The time until the drip prevention wiper sweep occurs is changed depending on vehicle speed.

When low speed wiper operation is selected, wiper operation will be switched from low speed to intermittent wiper operation only when the vehicle is stationary.

(However, when the intermittent wiper interval adjuster is adjusted to the highest level, the mode will not switch.)


n Wiper reverse motion

If snow or similar substances build up around the windshield and prevent the wiper from moving smoothly, the wiper may reverse direction before the end of its stroke in order to secure driver visibility and to protect the system. This is normal and does not indicate a malfunction.

n If no windshield washer fluid sprays


Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir.

n Lifting the wiper

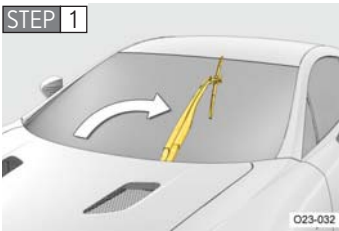

Activate the wiper and turn the ignition switch to the "LOCK" position when the wiper approaches the upper reverse position.

The wiper will stop moving.

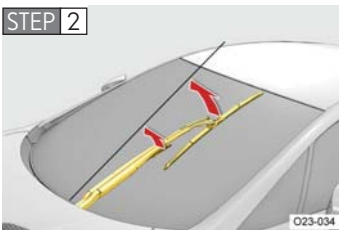

Lift and hold the main and sub blades.

The blades will not remain in the up position if released.

2-3. Operating the lights and windshield wipers

n If there is a system malfunction

"Check wiper system" will be shown on the meter. (→P. 325)

NOTICE

n When the windshield is dry

Do not use the wipers, as they may damage the windshield.

n When there is no washer fluid spray from the nozzle

Damage to the washer fluid pump may be caused if the lever is pulled toward you and held continually.

n Lifting the wiper



Make sure that the wiper is stopped near the upper reverse position.

Do not lift up the wiper if it is in the retracted position, because the wiper blade or front pillar fin may be damaged.